



**KN-WS100**



**MANUAL (p. 2)  
WEATHER STATION**

**MODE D'EMPLOI (p. 6)  
STATION MÉTÉO**

**MANUALE (p. 10)  
STAZIONE METEOROLOGICA**

**HASZNÁLATI ÚTMUTATÓ (o. 14.)  
IDŐJÁRÁSJELZŐ ÁLLOMÁS**

**BRUKSANVISNING (s. 18)  
VÄDERSTATION**

**MANUAL DE UTILIZARE (p. 22)  
APARAT METEO**

**ANLEITUNG (S. 4)  
WETTERSTATION**

**GEBRUIKSAANWIJZING (p. 8)  
WEERSTATION**

**MANUAL DE USO (p. 12)  
ESTACIÓN METEOROLÓGICA**

**KÄYTTÖOHJE (s. 16)  
SÄÄASEMA**

**NÁVOD K POUŽITÍ (p. 20)  
METEOROLOGICKÁ STANICE**

English

Deutsch

Français

Nederlands

Italiano

Español

Magyar

Suomi

Svenska

Česky

Română

## ENGLISH

### A. Mode switch able

Press [MODE] to switch among the status of Time, Alarm and Calendar.

### B. Time Mode

- 1). Starting from the normal time display status, press [SET] 2 seconds to enter the setting status of 12/24hr, Hour, Minute. Press [ADJUST] to plus one. Press [MODE] to quit the setting status.
- 2). Under MAX or MIN temperature display status, press [MAX/MIN] for 2 seconds to clear the memory of MAX, MIN temperature and replace with current value.
- 3). In normal time display status, press [MAX/MIN] key to check the MAX, MIN of temperature and hygrometer.
- 4). In normal time display status, press [C/F] key to change the °C and °F degree display

### C. Alarm Mode

- 1). Starting from the normal time display status, press [MODE] key once to enter the waiting status of alarm setting, then press [SET] 2 seconds to set the Alarm time of Hour and press [SET] again to set Alarm time of Minute. Press [ADJUST] to plus one. After setting, press [MODE] to quit the Alarm setting status.
- 2). Starting from normal time display, press [MODE] to enter Alarm status, then press [ADJUST] to switch the Alarm, and the beep, each hour.
- 3). Press [MODE] key to quit.

### D. Calendar Mode

- 1). Starting from normal time display, press [MODE] twice to enter waiting status of Calendar setting, press [SET] key for 2 seconds to enter Year setting, press [ADJUST] to plus one. Press [SET] and [ADJUST] key in turn to adjust Month, Date accordingly.
- 2). Press [MODE] to quit the Calendar Mode and resume the Time display status.

### E. SNOOZE Mode

- 1). When the alarm activates, press [SNOOZE/LIGHT] or don't press any key, the snooze function will open and ring again every five minutes. It can repeat four times.
- 2). Press any key except [SNOOZE/LIGHT] to quit.
- 3). Press [SNOOZE/LIGHT],the back light will last 3 seconds.

### Note:

If the humidity lower than 20%,the LCD will display LL%

If the humidity higher than 90%,the LCD will display HH%

**Declaration of conformity**

We,

Nedis B.V.

De Tweeling 28

5215MC 's-Hertogenbosch

The Netherlands

Tel.: 0031 73 599 1055

Email: info@nedis.com

Declare that product:

Name: KÖNIG

Model: KN-WS100

Description: Thermo hygrometer weather station

Is in conformity with the following standards

EMC: EN 61000-6-3 : 2007

EN 61000-6-1 : 2007

Following the provisions of the 89/336/EEC directive.

's-Hertogenbosch, 2008, March 04



Mrs. J. Gilad

Purchase Director

**Safety precautions:**

Do not expose the product to water or moisture.

**Maintenance:**

Clean only with a dry cloth. Do not use cleaning solvents or abrasives.

**Warranty:**

No guarantee or liability can be accepted for any changes and modifications of the product or damage caused due to incorrect use of this product.

**General:**

Designs and specifications are subject to change without notice.

All logos brands and product names are trademarks or registered trademarks of their respective holders and are hereby recognized as such.

**Attention:**

This product is marked with this symbol. It means that used electrical and electronic products should not be mixed with general household waste. There is a separate collections system for these products.

Copyright ©

